

## MULTIFUNCTION WATCH

## USER'S MANUAL

## I. PRODUCT DESCRIPTION

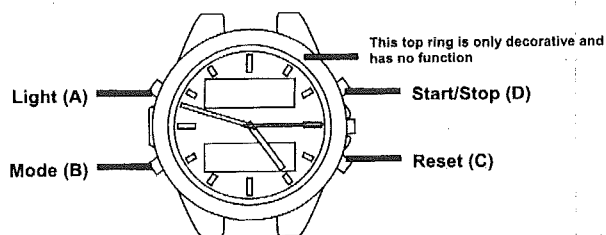


Fig. 1

## II. OPERATING INSTRUCTIONS

## A. DIGITAL TIME AND CALENDAR SETTING

In normal time display mode, press B key three times to enter time and calendar setting mode.

- Press D key to initialize the second to zero.
- Press C key, the icon of hour will flash.
- Press D key to reach the correct hour and press C key to continue the setting. You shall pay attention to 12/24H format. If the hour is in 12H format, the icon "A" or "P" appears which means morning or afternoon.
- The setting sequence is as shown below:

Second → Hour → Minute → Month → Date → Day

- After setting, press B key to confirm and exit.

## B. ANALOGUE TIME SETTING

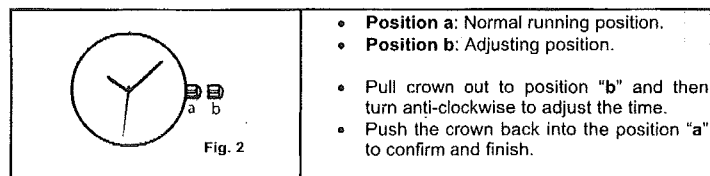


Fig. 2



- **Position a:** Normal running position.
- **Position b:** Adjusting position.
- Pull crown out to position "b" and then turn anti-clockwise to adjust the time.
- Push the crown back into the position "a" to confirm and finish.

### C. ALARM SETTING

In normal time display mode, press B key twice times to enter alarm setting mode.

- Press C key, the icon hour will flash, press D key to adjust your desired hours and press C key again to continue the minute setting.
- Press D key to adjust the minutes.
- Press B key to confirm and exit.
- When the alarm is ringing, press any key except A key to deactivate.

#### NOTE: In alarm display mode

- Press D key once to activate alarm, the icon  appears on the LCD screen.
- Press D key again to deactivate alarm function, the icon  disappears from the LCD screen.

### D. CHRONOGRAPH FUNCTIONS

In normal time display mode, press B key once to enter chronograph function.

- Press D key to start/stop the chronograph.
- When stopping, press C key to initialize the chronograph to zero.
- When running, press C key to split count.
- Then press D key to exit split count, and stop counting.
- When exit split count, press C key to display all counts, and press C key again to initialize the chronograph to zero.
- Press B key to exit.

### E. BACKLIGHT

In any mode, press A key to turn on the backlight function. The backlight will deactivate automatically after several seconds.

### III. SPECIFICATIONS

- Piles:
  - 1x CR2025 button cell (included), 3V ---
  - 1x SR626SW button cell (included), 1.5V ---

### IV. WARNING

- Always make sure the crown is fully return to the case to ensure water resistance.
- DO NOT operate the crown or buttons in water or when the watch is wet.
- To prolong the appearance of your watch, avoid contact with the following :Perfumes, hairspray, cosmetics, detergents, adhesives and paints as they cause discoloration, deterioration and damage.
- To help prevent possible damage from perspiration, dust and moisture, periodically wipe your watch with a soft dry cloth.
- To ensure lasting durability please take note of the following points: Never attempt to open the case of your watch. Batteries should be replaced by a qualified technician.
- Your watch is shock resistant, however please be careful not to drop or hit your watch against hard surfaces, as this will cause damage.



**WARNING:** You should not dispose of this device with your household waste.  
A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

Marketed by EUROTIPS VERSAND GMBH D-40764 LANGENFELD